




Thomas' Liquid Stainless Steel™

Fridge Kit - Covers approximately 75 sq. ft.

EXTREMELY IMPORTANT!!! - APPLY LIGHT THIN COATS

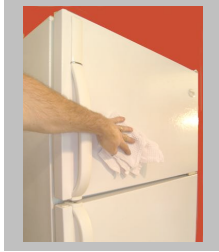

1 Clean


Clean the surface with window cleaner to remove any dirt, grease, or dust. Allow to dry. Remove handles if possible.

Tape off any areas that you don't want to paint.

You do not need to prime your appliance unless you are covering plastics, bare wood, new metal, laminates, or rusted surfaces. If applying primer, brush in the same direction as Liquid Stainless Steel.

Note: For brass, plastics or glass, gently de-gloss with a very fine grit sandpaper then wipe away any sanding dust with a damp cloth.

VERY IMPORTANT: Shake & STIR well before using as the stainless flecks may have gathered in clumps at the bottom of the can. STIR THROUGHOUT THE PROCESS. Apply at 60 - 90°F.

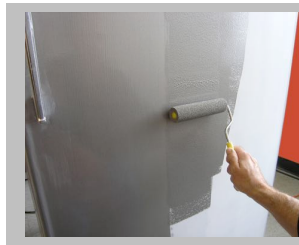

Roll on



Brush smooth

Using 3/8" nap roller, roll one entire side of your appliance. Then, while it is still wet, brush smooth with the 11" wide foam brush using long (vertical), **bottom-to-top**, overlapping strokes. Repeat on all sides. Allow 1-hour dry time between coats.

Please Note: your first coat will look very thin and uneven. It's OK. It will fill in and brighten as it dries.

Keep your foam brush from drying out by storing it in plastic bags between coats. After the final coat, clean with water and dry.

For the 2nd coat, after rolling on: use long (vertical), **top-to-bottom**, overlapping strokes to smooth out the finish.


Repeat these steps for additional coats, alternating from bottom-to-top/top-to-bottom motions. 3-5 coats may be needed for full coverage.

Watch for any runs and brush them out before they dry. Keep your appliance doors cracked open.

2. Apply Liquid Stainless Steel™



Roll on

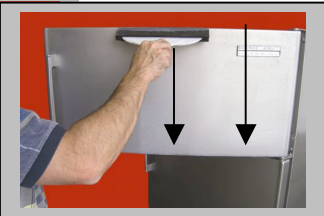

Brush smooth

Wait a minimum of 2 hours before applying Clear Topcoat.

Apply the Clear Topcoat **exactly the same** as your Liquid Stainless Steel Base Coat. (Note: goes on milky white, dries clear).

- 1 Coat of Clear Topcoat = satin finish
- 2 Coats of Clear Topcoat = semi gloss
- 3 Coats of Clear Topcoat = high gloss

Dry Time: Wait 1 hour between coats.

Keep appliance doors cracked open for a minimum of two hours after your final coat. Clean up with water.

Note: Remove any masking tape carefully. You may need to score tape's edge while removing.



3. Apply Clear Topcoat

How to care for your Liquid Stainless Steel™ finish:



Clean with mild soap, water & a soft cloth. Do not use cleaners or polishes.

Use dishwasher and cook with stove/oven 24 hours after Top Coating.

Minimize contact between new finish with hot liquids and magnets for 14 days.

Do not scrub clean for 14 days - allowing for full cure.

Phone:

Mon - Friday
7:30 AM to 4 PM CST
800-650-5699

For more details, Demo Video and Warranty go to:
LiquidStainlessSteel.com

Thomas' Kitchen Art, Inc.
St. Louis, MO 63102



Want a stainless range and dishwasher?
Available in Range & Dishwasher Kits too!



Note: Liquid Stainless Steel™ is not designed to repair steel, for food preparation, sinks or toilets. Do not use on surfaces that will be submerged in liquids or 300°F+ surfaces. **WARNING:** If you scrape, sand or remove old house paint, you may release lead dust. Lead is toxic. Contact National Lead Information Hotline at 1-800-424-LEAD. Caution! Do not take internally. Avoid contact with eyes and skin. Contains chemicals known to California to cause cancer & birth defects. Use with adequate ventilation. **KEEP OUT OF REACH OF CHILDREN.** Water Based. Lead free. Store above 40°F.



Thomas' Liquid Stainless Steel™

EXTREMELY IMPORTANT!!! - APPLY LIGHT THIN COATS

Range & Dishwasher Kit - Covers approximately 19 sq. ft.

Note: Most ranges are surrounded by counters. This Kit covers a range front, top, hood & dishwasher front.



1 Clean

Clean the surface with window cleaner to remove any dirt, grease, or dust. Allow to dry. Remove handles if possible.

Tape off any areas that you don't want to paint.

You do not need to prime your appliance unless you are covering plastics, bare wood, new metal, laminates, or rusted surfaces. If applying primer, brush in the same direction as Liquid Stainless Steel.

Note: For brass, plastics or glass, gently de-gloss with a very fine grit sandpaper then wipe away sanding dust with a damp cloth.

VERY IMPORTANT: Shake & **STIR** well before using as the stainless flecks may have gathered in clumps at the bottom of the can. **STIR THROUGHOUT THE PROCESS.** Apply at 60-90°F.

Note: On range tops, LSS™, as with all stainless steel tops will experience 'bronzing' around the burners. Bronzing may be observed in all chefs' kitchens.



2. Apply Liquid Stainless Steel™

Brush on the 1st coat of Liquid Stainless Steel™ using long (horizontal), thin, **left-to-right**, one-way strokes, in the same direction with foam brush. Wait 1 hour between coats.

Apply the 2nd coat by using long (horizontal), thin, **right-to-left** brush strokes with the foam brush.

Repeat steps for additional coats, alternating **left-to-right, right-to-left** motions. Apply 3-5 very thin coats. Your first coat will look very thin and uneven. It's OK. It will fill in and brighten as it dries.

Tips:

Watch for any runs and brush them out before they dry. Keep your appliance doors cracked open.

Put your foam brush in zip lock plastic bag between coats to prevent from drying out.

After final coat of stainless steel is applied, clean your foam brush with water and dry.



3. Apply Clear Topcoat

Wait a minimum of 2 hours before applying clear topcoat

Brush on the Clear Topcoat in the same direction as your Liquid Stainless Steel™ finish. (Note: goes on milky white, dries clear)

- 1 Coat of Clear Topcoat = Satin finish
- 2 Coats of Clear Topcoat = Semi-gloss
- 3 Coats of Clear Topcoat = High gloss

Dry Time: Wait 1 hour between coats.

Keep your appliance doors cracked open for a minimum of two hours after final coat.

Clean up with water.

Note: Remove any masking tape very carefully. You may need to score the edge of the tape while removing.



How to care for your Liquid Stainless Steel™ finish:



Clean with mild soap, water & a soft cloth. Do not use cleaners or polishes.

Use dishwasher and cook with stove / oven 24 hours after Top coating.

Minimize contact between new finish with hot liquids for 14 days.

Do not apply magnets for 14 days.


Do not scrub clean for 14 days - allowing for full cure.

Phone:

Mon – Friday
7:30 AM to 4 PM CST
800-650-5699

For more details, Demo Video and Warranty go to:
LiquidStainlessSteel.com

Thomas' Kitchen Art, Inc.
St. Louis, MO 63102

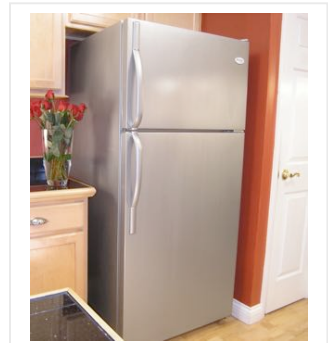

Want a stainless refrigerator?
Available in Fridge Kits too!

Note: Liquid Stainless Steel™ is not designed to repair steel, for food preparation, sinks or toilets. Do not use on surfaces that will be submerged in liquids or 300°F+ surfaces. **WARNING:** If you scrape, sand or remove old house paint, you may release lead dust. Lead is toxic. Contact National Lead Information Hotline at 1-800-424-LEAD. Caution! Do not take internally. Avoid contact with eyes and skin. Contains chemicals known to California to cause cancer & birth defects. Use with adequate ventilation. **KEEP OUT OF REACH OF CHILDREN.** Water Based. Lead free. Store above 40F.